

ISOBARIK SPEAKER STAND MANUAL

Whenever possible, the dealer should install these stands.

**WARNING**

The speakers are very heavy; do not attempt to lift them unaided.

**CONTENTS**

- 8 top spikes (small point)
- 8 bottom spikes
- 16 M10 nuts (17 mm A/F)
- 2 stands
- 1 adjusting bar

Please ensure that you have all the above components.

**STAND ASSEMBLY**

Screw the top spikes and their locknuts into the stand - the shorter these are, the more stable the stand will be. Leave the locknuts finger tight.

Turn the speaker upside-down using the top piece from the original packing as a stand to protect it.

Put the stand, top spikes pointing down, onto the bottom of the speaker and adjust the spikes until there is no play between the stand and speaker. Tighten the locknuts.

Screw the bottom spikes and their locknuts into the stand. Again, ensure that the spikes are inserted as far as possible into the stand while still protruding sufficiently to go through any carpet on which the stand is to sit. Leave the locknuts finger tight.

Place the stand in the desired position; the speaker itself should be within 5 - 10 cm from the wall, and at least 45 cm from any corner, where possible.

Give the stand a hard push down to ensure that the spikes go through the carpet. Adjust the spikes until the stand is stable along the diagonals and is level. There is a small hole in each of the spikes which may, with the adjusting bar, make the adjustment easier.

Carefully lower the speaker onto the stand. Check for, and eliminate any play between the stand and the floor or the stand and the speaker.

Tighten all of the locknuts, taking care not to alter the position of the spikes.

#### NOTES

It is worthwhile checking periodically that the stands have not developed any play which allows them to rock.

If you have any problems at all, please contact your supplier/distributor or ourselves.

### ISOBARIK STAND

